



Exceeding Your
Expectations
We Build
Trust

深圳市罗杰科技有限公司
SHENZHEN SCIFLOW TECHNOLOGIES CO LTD
www.sciflow.com eleflow@163.com

No Cleaning — No Cross Contamination — Reduce Costs

Disposable Liqui and Visco Thief

Liquid and Cream Sampling Without Costly Cleaning

ATEX Rated
Zones: 0, 1 & 2

Two models are available which make sampling liquids, creams and pastes very easy. The LiquiThief and ViscoThief have been designed to be rigid, this ensures that the operator knows exactly the depth at which each sample is taken.

- Features:
- Fully welded construction (no adhesives or screws are used)
 - Assembled in a medical clean room
 - Each sampler is individually wrapped
 - Made from HDPE or PP (FDA acceptable grade conforms to CFR 177.1520)
 - FDA acceptable silicone rubber is used for the piston seal - CFR 177.2600
 - ATEX Rated for Zones 0, 1 & 2


- Options:
- Pre-sterilised




LiquiThief or ViscoThief?

The LiquiThief and ViscoThief are essentially the same except for the size of the hole in the tip. The LiquiThief has a small hole (for sampling low viscosity liquids) and the ViscoThief has a large hole (for sampling high viscosity liquids and creams).

LiquiThief Tip



ViscoThief Tip

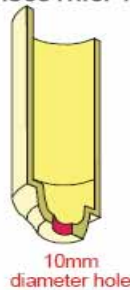

Why Use A Disposable Sampler?

There are many reasons why a disposable sampler should be used:

- Cleaning costs - often the cost of cleaning is less than the cost of the sampler.
- No cleaning validation costs
- No cross contamination worries

How to use:

1. Insert the sampler into the product
2. At the required depth pull up the handle. The sample will be drawn into the sampler
3. Withdraw sampler
4. Push down handle to expel the sample

