



Exceeding Your  
Expectations  
We Build  
Trust

深圳市罗杰科技有限公司  
SHENZHEN SCIFLOW TECHNOLOGIES CO LTD  
[www.sciflow.com](http://www.sciflow.com) [eleflow@163.com](mailto:eleflow@163.com)

# Sack Master


## Large Range of High Quality Sack Samplers

The Sack Master has been specially designed to take samples through the side of a sack. A range of sample collection methods are available.

Type: Single point

Material: 316 stainless steel

- Operation:
1. Insert the sampler through the side of the sack.
  2. Angle sampler downwards to allow the product to flow into the sample collecting container
  3. Seal the hole using an Ultra Adhesive Label (see page 80)

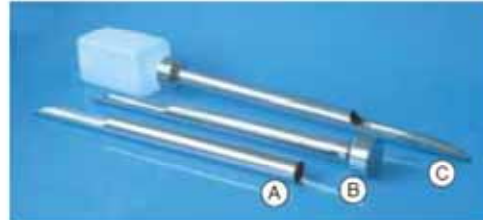

End Fittings:

### Ⓐ Plain

- Sample collecting bag is held over end of sampler
- Plain end
- Electropolished



### Ⓑ End Cap

- Cap screws on to end of Sack Sampler
- Easily removed for cleaning
- Sample is retained in Sack Sampler
- Electropolished



### Ⓒ Bottle Adapter

- Adapter screws on to end of Sack Sampler
- Sample is collected in either a 250ml or 500ml bottle
- After sampling unscrew bottle and screw on the plastic bottle cap
- Electropolished



Part No.	Sampler Description	Sampler End Fitting
1320A-01	Sack Master P	Plain
1320B-01	Sack Master EC	End Cap
1320C-01	Sack Master BA	Bottle Adapter*
* Sampler supplied with one 250ml Sample Bottle (Part No. 8165A-250)		
<b>Accessories</b>		
8165A-250	Sampling Bottle - 250ml - HDPE - for use with bottle adapter	
8165A-500	Sampling Bottle - 500ml - HDPE - for use with bottle adapter	
8001A-500	Cleaning Brush - 500mm length	
Storage Cases	Please see page 79 for more information	



Exceeding Your  
Expectations  
We Build  
Trust

深圳市罗杰科技有限公司  
SHENZHEN SCIFLOW TECHNOLOGIES CO LTD  
[www.sciflow.com](http://www.sciflow.com) [eleflow@163.com](mailto:eleflow@163.com)

No Cleaning — No Cross Contamination — Reduce Costs

## Disposable Sack Sampler

New

The Disposable Sack Master is a hygienic, single use device that has been specially designed to take samples through the side of a sack.

All Disposable Sack Masters are individually bagged and for special applications the device is available pre-sterilised.

- Suitability:
- Powders and granules
- Features:
- Single point sample
  - Individually wrapped
  - Made from tough HDPE (FDA acceptable grade - conforms to CFR177.1520)
- Options:
- Available pre-sterilised



Unwrap Sampler



Insert the sampler through the side of the sack.

Angle sampler downwards to allow the product to flow into the sample collecting bag



Seal hole with a UA label (See Page 60 for details of our range of UA Labels)



Part No.	Length	Diameter	Pre-Sterilised	Quantity per Box
8085A-100	400mm	25mm	No	100
8085A-100S	400mm	25mm	Yes	100
8080A-540	Sample Collecting Bag 540ml - for hygienic use. Sterile		Qty: 500 bags	
8080A-810	Sample Collecting Bag 810ml - for hygienic use. Sterile		Qty: 500 bags	

## Ultra Adhesive Labels

They're very, very sticky!



Contact us for details