



Exceeding Your
Expectations
We Build
Trust


深圳市罗杰科技有限公司
SHENZHEN SCIFLOW TECHNOLOGIES CO LTD
www.sciflow.com eleflow@163.com

Slot Sampler

Heavy Duty Multilevel Sampler

The Slot Sampler is ideal for taking a large volume, cross sectional sample from a container. The sampler has a robust all stainless steel construction and is suitable for sampling free flowing powders, granules and even slightly cohesive powders.

- Type: Cross section (composite sample)
- Material: 316 stainless steel, bright finish
- General: Suitable for taking large volume samples.
- Operation:
1. Insert the sampler into the product
 2. Turn the handle to open the slot - the product can now be collected in the central tube
 3. Turn the handle to close the slot
 4. Remove the sampler
 5. Invert the sampler to discharge the sample

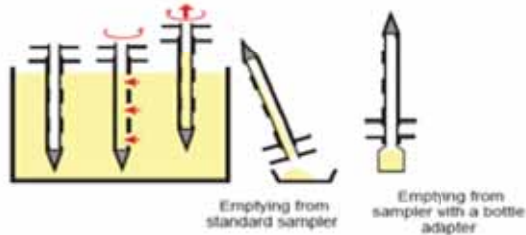

Standard Slot Sampler (without Bottle Holder)



Sample being discharged



A Slot Sampler taking a sample from a drum of powdered metal

Bottle Holder



The Slot Sampler is available with a bottle holder. This enables the sample to be emptied directly into a bottle.

- Improved Containment
- Save time
- Can be used with either a 250ml or 500ml bottle



Part No.	Bottle Holder	Sampler Length	Number of slots	Maximum Sample volume
1210A-600	No	600mm	3	110ml
1210A-1000	No	1000mm	4	190ml
1210A-1500	No	1500mm	5	300ml
1210B-600	Yes*	600mm	3	110ml
1210B-1000	Yes*	1000mm	4	190ml
1210B-1500	Yes*	1500mm	5	300ml
0165A-250	Sample collecting bottle - 250ml, HDPE			
0165A-500	Sample collecting bottle - 500ml, HDPE			
Tip2	Round tip. (Sampler supplied with pointed tip) Rounded tips are ideal when not trying to pierce a bag or cloth			
Cleaning brushes	Please see page 78 for more information			
Storage Cases	Please see page 79 for more information			
Earthing Lugs	Please see page 75 for more information			

* Don't forget to order a Sample Collecting Bottle

深圳市南山高新区科苑南路留学生创业大厦 1406 Te: 86-755-86329015/86329083 Fax 86-755-86329019
R1406 Overseas Chinese Scholar Venture Park, South Keyuan Road, Nanshan Dist., ShenZhen518057, China