



Exceeding Your  
Expectations  
We Build  
Trust



深圳市罗杰科技有限公司  
SHENZHEN SCIFLOW TECHNOLOGIES CO LTD  
www.sciflow.com eleflow@163.com

## Pocket Sampler

### Discrete Multilevel Sampler

The highly popular Pocket Sampler is suitable for taking discrete samples from free flowing powders and granules. The sampler is available in a range of sizes and designs.

- Type: Multilevel (discrete/zone samples)
- Material: 316 Stainless steel outer with a PTFE core or all 316 stainless steel construction
- Operation:
1. Insert the sampler into the product
  2. At the required depth rotate handle to expose the collecting pockets, the product will flow into the collecting pockets.
  3. Rotate handle to close pockets and remove sampler.

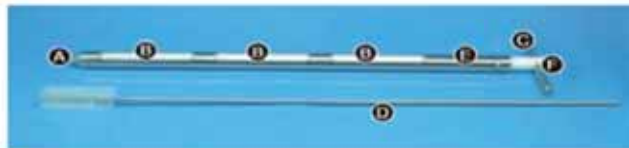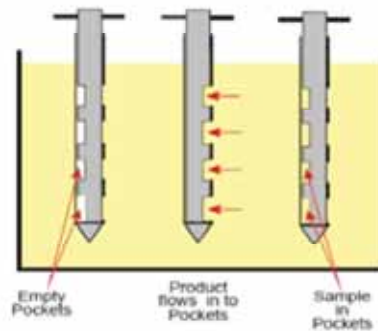

- A Removable Tip - allows thorough cleaning
- B Sampling Pockets
- C Handle
- D Cleaning Brush
- E Outer Tube
- F Inner Rod



Sealing sleeves enable one pocket to be emptied at a time

Emptying Rack allows samples to be deposited directly into collecting bottles



316 ✓

304 ✓

NEXT DAY DELIVERY

Part No.	Outer Tube	Inner Rod	No. of Pockets	Volume of Pockets	Sampler Length
1220A-600	316ss	PTFE	3	15ml	600mm
1220A-900	316ss	PTFE	3	20ml	900mm
1220A-1500	316ss	PTFE	5	20ml	1500mm
1220B-600	316ss	316ss	3	15ml	600mm
1220B-900	316ss	316ss	3	20ml	900mm
1220B-1500	316ss	316ss	5	20ml	1500mm
<b>Ancillaries</b>	8005A-01		Sealing Sleeve Set - Covers pockets - set of 3 sleeves		
	1220X-600		Emptying rack for 600mm sampler - stainless steel		
	1220X-900		Emptying rack for 900mm sampler - stainless steel		
	1220X-1500		Emptying rack for 1500mm sampler - stainless steel		
	LJQ-1		Earthing connection point. See page 75 for more info		
	Tip2		Round tip - (Sampler supplied with pointed tip). Use rounded tips when sampling from delicate sacks.		
	Cleaning brushes		See page 78 for full range		
	Storage Cases		See page 79 for full range		

深圳市南山高新区科苑南路留学生创业大厦 1406 Te: 86-755-86329015/86329083 Fax 86-755-86329019  
R1406 Overseas Chinese Scholar Venture Park, South Keyuan Road, Nanshan Dist., ShenZhen518057, China