



Exceeding Your
Expectations
We Build
Trust

深圳市罗杰科技有限公司
SHENZHEN SCIFLOW TECHNOLOGIES CO LTD
www.sciflow.com eleflow@163.com

Low Level Sampler


Ideal for sampling liquids at a set distance from the bottom of a container to check for layering, contamination or settling out of the product.

Suitability: Liquids and fine suspensions

Type: Single point

Material: 316 Stainless steel & PTFE

Operation: Push sampler to the bottom of the container until the tip pushes on the container base. As the sampler is pushed down the spring inside the body compresses and the sampler body moves down. This action causes the seal to move away from the entry hole allowing liquid to enter the main body. To close the entry hole lift sampler.

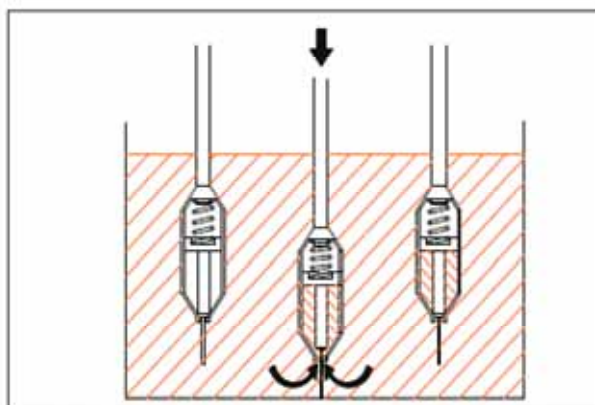

Only when the sampler is pushed against the base of the container will the sample be taken.

Handles	Part No.	Handle Length
	5080A-600	600mm
	5080A-1000	1000mm
	5080A-1500	1500mm
Sampling Chambers	Part No.	Volume
	5080T-10	10ml
	5080T-20	20ml
	5080T-25	25ml