



Exceeding Your
Expectations
We Build
Trust

深圳市罗杰科技有限公司
SHENZHEN SCIFLOW TECHNOLOGIES CO LTD
www.sciflow.com eleflow@163.com

Pump Sampler

Highly effective hand operated sample pump

Allows quick sampling of liquids. The chance of cross contamination is greatly reduced by using new tube and bottles for each sample.

Suitability: Low to medium viscosity liquids.

Type: Single Point

Material: PE, PTFE or 316L stainless steel

Operation:


1. Cut the sampling tube to the required length.
2. Screw the collecting bottle to the base of the hand pump.
3. Insert one end of the sampling tube through the hand pump and into the collecting bottle.
4. Drop the other end of the sampling tube into the product. At the required depth pump the handle. Several pumps will fill the sample collecting bottle.



The pump is not a product contact part. Only the tube and collecting bottle come into contact with the product

Pump Efficiency

The Pump Sampler is highly efficient and is able to pump water to a height of about 4m

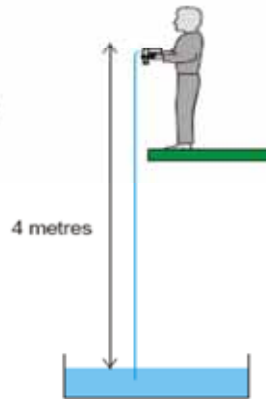

PTFE Sampler Set

Part No. 5020T-01



Set includes

- 1 off plastic hand pump with PTFE bottle adapter
- 1 off PFA Bottle (180ml)
- 1 off Sampling Tube - PTFE - 5m
- 1 off Tube cutter
- 1 off Stainless steel hose weight
- 1 off Carrying case



Part No.	Description
5020T-01	PTFE Pump Sampler Set
Spares:	
5020A-09	Hand Pump - Plastic
5020T-5	Sampling Tube - PTFE - 5m
5020A-07	Tube cutter
Bottles:	
5020A-03	Sample bottle - PFA - 90ml
5020A-04	Sample bottle - PFA - 180ml



Exceeding Your
Expectations
We Build
Trust

深圳市罗杰科技有限公司
SHENZHEN SCIFLOW TECHNOLOGIES CO LTD
www.sciflow.com eleflow@163.com

PE Sampler Set

Part No. 5020P-01



Set Includes:

- 1 off plastic hand pump with PE bottle adapter
- 10 off PE Bottles (100ml)
- 1 off Sampling Tube - PE - 10m
- 1 off Tube cutter
- 1 off Stainless steel hose weight
- 1 off Carrying case



Part No.	Description
5020P-01	PE Pump Sampler Set (see above for contents)
Spares:	
5020A-09	Hand Pump Plastic
5020P-100	Sampling Tube - PE - 100m
5020A-07	Tube cutter
Bottles:	
8130A-100	Sample bottle - PE - 100ml
8130A-250	Sample bottle - PE - 250ml
8130A-500	Sample bottle - PE - 500ml
8130A-1000	Sample bottle - PE - 1000ml

Stainless Steel Sampler Set

Part No. 5020S-02



Set Includes:

- 1 off stainless steel hand pump and stainless steel bottle adapter
- 10 off PE Bottles (100ml)
- 1 off Sampling Tube - PE - 10m
- 1 off Tube cutter
- 1 off Stainless steel hose weight
- 1 off Carrying case
- Made to order



Part No.	Description
5020S-02	Stainless Steel Pump Sampler Set
Spares:	
5020S-01	Hand Pump Stainless Steel
5020P-100	Sampling Tube - PE - 100m
5020A-07	Tube cutter
Bottles:	
8130A-100	Sample bottle - PE - 100ml
8130A-250	Sample bottle - PE - 250ml
8130A-500	Sample bottle - PE - 500ml
8130A-1000	Sample bottle - PE - 1000ml



Use Your Current Sample Collection Bottles



Special PTFE adapters can be made to allow bottles with different neck sizes and thread patterns to be used with the Pump Sampler.

These adapters are suitable for use with either the plastic or stainless steel pump sampler (state your pump type at the time of ordering).

When ordering please post us one of your bottles.



Part No.	Neck Diameter
5020X-1	Up to 50mm diameter
5020X-2	Up to 100mm diameter
5020X-3	Greater than 100mm