




Exceeding Your
Expectations
We Build
Trust

深圳市罗杰科技有限公司
SHENZHEN SCIFLOW TECHNOLOGIES CO LTD
www.sciflow.com eleflow@163.com

Ice Sampler

Best Selling Ice Sampler

Suitability: Ice, wax and other similar materials
Type: Single Point
Material: 316 stainless steel
Operation: Rotate the handle as the sampler is pushed into the product. The scroll will cut into the product and the sample will be deposited in the sample collecting chamber. Removing the cylinder will allow the sample to be accessed.

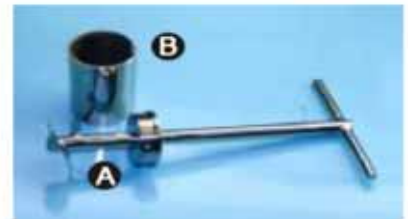

- (A) Scroll
- (B) Removable cylinder

Part No.	Length	Sample Volume	Diameter of Sampling Head
6000A-300	300mm	50ml	40mm
6000A-550	550mm	50ml	40mm
6000A-1050	1050mm	50ml	40mm


Ice Borer

Robust Ice Sampler

Suitability: Ice, wax and other similar materials
Material: 316 stainless steel
Operation: Rotate the handle as the sampler is pushed into the product. The sharp edge will cut into the product and the sample core will be deposited in the tube. Push the Discharge Rod down the Ice Borer to remove the sample.



Above- Sharp cutting tip

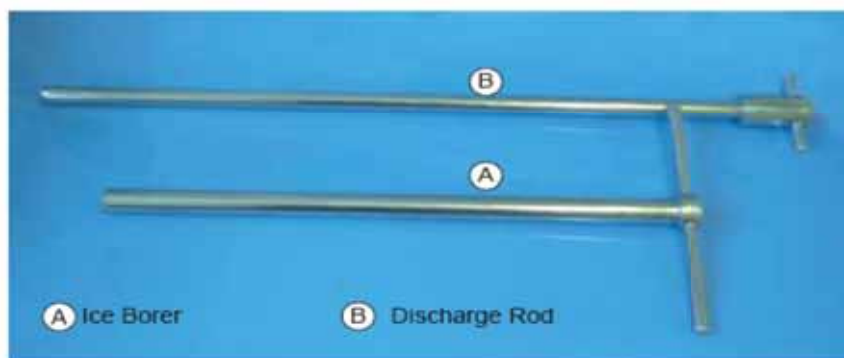

- (A) Ice Borer
- (B) Discharge Rod

Part No.	Description	Length	Material
6005A-500	Ice Borer	500mm	316 stainless steel
6005A-1000	Ice Borer	1000mm	316 stainless steel
6005D-500	Discharge Rod	500mm	316 stainless steel
6005D-1000	Discharge Rod	1000mm	316 stainless steel

